



Operator Manual

NA 6468 Combi APM



Win Equipment B.V.
De Kronkels 31
3752 LM Bunschoten
the Netherlands

Tel.: + 31 (0)33 299 22 66
E-mail: service@nissei.nl

Contents

Contents	3
1 Introduction	5
1.1 Purpose	5
1.2 Manufacturer	5
1.3 Machine identification	5
1.4 Warranty	6
1.5 Accessories	6
1.6 Liability	6
1.7 Copyright	6
2 Safety	7
2.1 Symbols used in this manual	7
2.2 Emergency stop	7
2.3 Safety symbols on the machine	8
2.4 Safety instructions	9
2.5 Operation and maintenance	10
2.6 Hygiene	10
2.7 Storage	10
3 Installation	11
3.1 Introduction	11
3.2 Installation site	11
3.3 Electrical connection	11
3.4 Connection of cooling water	12
3.5 Adjusting castors	12
4 Machine Description	13
4.1 Function and products	13
4.2 Machine overview	13
5 Operation	17
5.1 Start up (start of working day)	17
5.2 Dispensing soft ice cream	19
5.3 Dispensing milkshake	20
5.4 Switching off (end of working day)	21
Switching off & standby	22
Switching off & pasteurising	23
5.5 Emergency stop	25
5.6 Switching on/off	25
5.7 Changing the settings	26
Adjusting the viscosity	26
Adjusting milkshake thickness	26
Adjusting syrup quantity	27

6	Faults	28
6.1	Messages on display	28
6.2	How can I get the best yield from the machine	29
	How can I check whether the mix pump is not causing a malfunction. . . .	29
	What should I do with a soft or wet and watery ice cream	29
	What should I do in case of rasping, popping or if the machine displays LO	30
6.3	Faults table	30
7	Maintenance	33
7.1	Safety instructions	33
7.2	General instructions	33
	Requirements	34
	Preventive maintenance	34
	Cleaning and disinfecting	35
	Decalcify	36
7.3	(Dis)assembling, cleaning and disinfecting the machine	36
	Procedure	36
	Defrosting and draining cylinder (left and right)	37
	Removing mix pump and mix tank agitator (left en right)	38
	Draining the mix tank (leftand right)	38
	Cleaning the mix tank and cylinder (left and right)	39
	Decalcify the machine (left and right)	41
	Removing the combi head	42
	Disassembling, cleaning and disinfecting the combi head	43
	(Dis)assembling, cleaning and disinfecting the milkshake motor	44
	Fitting the combi-head	45
	(Dis)assembling, cleaning and disinfecting the cylinder beater (left and right)	46
	Fitting the ice cream head	47
	Disinfecting the machine (left and right)	49
	(Dis)assembling, cleaning and disinfecting the mix pump (left and right) . .	49
	Starting up the machine (left and right)	53
	Clean and rinse syrup head and hoses	55
8	Transportation and storage	58
8.1	Transportation	58
8.2	Storage	58
9	Discarding	59
9.1	Environmental factors	59
Annex 1	Specifications	61
Annex 2	Spare parts	62
A2.1	Combi-head, syrup block and beater	62
A2.2	Mix pump (2x)	64
A2.3	Milkshake motor and APM sensor	66
Annex 3	EC Declaration	67

1 Introduction

1.1 Purpose

The purpose of this Operator Manual is to provide the operator with information relating to the use and maintenance of the NA 6468 Combi APM.



Read this Operator Manual carefully before using the machine.

1.2 Manufacturer

Win Equipment B.V.
De Kronkels 31
3752 LM Bunschoten
The Netherlands

Tel.: +31 (0)33 299 22 66





Dealer mark



1.3 Machine identification

The machine plate is affixed to the rear of the machine. This plate carries the CE mark. This means that the machine meets the basic health and safety requirements of the European Union.

  NISSEI FREEZER		<small>Hermetically sealed system contains fluorinated greenhouse gases.</small>	
MODEL	NA6468WEG	R404A charge	2 x 730 Gram
SERIAL NR.	C8170001	GWP	3922
POWER 50Hz	400 V : 3 Phase	CO ₂ equivalent	5,726 Ton
Dasher motor	2 x 550 W	Test pressures:	
Compressor	2 x 1100 W	High side	2.1 MPa
Consumption	2 x 3.6 A	Low side	1.5 MPa
<small>MANUFACTURER :</small> NISSEI COMPANY LTD <small>2-11 3-CHOME HAGINOSHO, TAKATSUKI-SHI, OSAKA-FU, 569-0093 JAPAN</small>		<small>IMPORTER E.U. :</small> WIN EQUIPMENT B.V. <small>De KRONKELS 31 3752LM BUNSCHOTEN the NETHERLANDS</small>	



This machine contains fluorinated greenhouse gases in a hermetically sealed system with the values as specified in the label.

1.4 Warranty

The dealer offers, on new machines, a 5-year warranty on expensive parts and a 12-month warranty on non-wearing parts and repair costs. This is in accordance with the conditions specified in the order confirmation.

1.5 Accessories

The following items are supplied with the machine:

- Operator manual
- Pasteurising plug
- O ring remover
- Allen bolt screwdrivers (2x)
- Piston puller
- Cleaning brush, narrow and wide
- Tube of lubricant (Petrogel)
- O ring replacement set
- Set of fuses
- Set of nozzles

1.6 Liability

The dealer is not liable for any unsafe situations, accidents and/or damage resulting from any of the following points:

- Failure to observe warnings or instructions as displayed on the machine or in this Operator Manual.
- Use of the machine for applications or under conditions other than those specified in this Operator Manual.
- Changes of kind made to the machine. This also includes the use of different replacement parts.
- Inadequate maintenance.

The dealer is not liable for any consequential damage due to machine faults, such as damage to products, business interruptions, production loss etc.

1.7 Copyright

Copyright © 2018 Win Equipment B.V.

All rights reserved.

No part of this publication may be copied, stored in an automated data file or made public, in any form or in any way, be it electronically, mechanically, by photocopy, recording or in any other way, without the prior written consent of the manufacturer.

2 Safety

2.1 Symbols used in this manual.

Below you will find an explanation of the symbols that may be used in this manual to draw the attention of the reader to particular situations.



Caution needed:
- an accident may occur or
- damage may occur to the machine
Do not do this!!!



Suggestion to make tasks or actions easier to carry out.



It is important to read the information provided.



Wait before continuing with the next action.

2.2 Emergency stop

The emergency stop button must be pressed immediately if people or machinery are at risk. The entire machine stops immediately and the power is turned off. The emergency circuit is now in operation. The operation of the emergency stop is described in chapter 5.5 - 'Emergency stop'.



Use the emergency stop button immediately if people or machinery are at risk.



People who operate the machine must be informed about the operation and location of the emergency stop button.

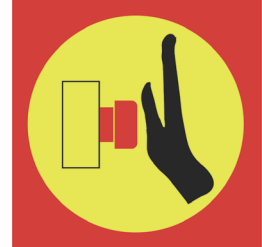


2.3 Safety symbols on the machine

The following safety symbols have been affixed to the machine:

Location of emergency stop.

This symbol is affixed to the left front side of the machine above the emergency stop button.



Risk of trapping hand.

This symbol is affixed to the top of the machine next to the mix tank.



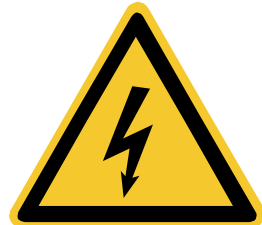
Do not spray with water.

This symbol is affixed to the rear of the machine next to the ventilation slots.



Danger: electricity.

This symbol is affixed inside the housing.



2.4 Safety instructions

The machine meets the basic health and safety requirements of the relevant directives of the European Union.

Improper or careless use can lead to dangerous situations. Please observe the following general safety instructions:

- Connect the machine in accordance with the basic health and safety requirements of the relevant European directives.
- Exercise caution with loose hair and clothing.
- Keep your hands away from dangerous zones.
- Never power up the machine if people are in contact with it.
- Pull the plug out of the socket before carrying out maintenance work on the machine.
- Faulty safety equipment must be replaced before the machine is used in production.
- The machine must be maintained in accordance with the instructions found in chapter 7 - 'Maintenance' on page 33.
- Changes to the machine must not be implemented without the prior consent of the manufacturer.
- The safety equipment of the machine must be checked weekly for correct operation.
- Never remove the machine's plating. There are no parts that you can replace or adjust yourself.
- Do not remove or cover any labels on the machine.



The safety instructions specified in this document must be observed. Deviating from the instructions can cause unacceptable risks.

2.5 Operation and maintenance

The machine may only be operated, maintained and cleaned by trained staff. The end user determines the basis on which staff are authorised for this purpose.

2.6 Hygiene

Good hygiene is very important. Please adhere to the following rules:

- **Clean and disinfect** the machine at least according the hygiene code ice making but at least once every 6 weeks
- **Decalcify** the machine every 2nd and 4th cleaning depending on the pollution, but at least twice a year.
- **Use** the recommended cleaning, disinfecting and decalcify agents to ensure an optimum result.
- **Use** prescribed lubricants only.



Always clean and pasteurize both sides of the machine simultaneously.



Good hygiene ensures better ice cream and satisfied customers.



The operator always remains responsible for good hygiene.

2.7 Storage

To prevent the machine being damage due to frost the machine must always be stored by a temperature between 4°C and 50°C when it is not used.



Prevent damage by frost. Store the machine when it is not used by a temperature between 4°C and 50°C.

3 Installation



Read this chapter carefully before installing the machine. This is the only way to ensure maximum safety.

3.1 Introduction

The dealer carries out the initial installation. When moving the machine you are advised to contact the dealer.



The machine may only be installed by qualified personnel.

3.2 Installation site

- DO NOT place the machine outside.
- Place the machine on a firm, flat surface (to prevent noise and vibration).
- Keep 30 cm free at the rear and 50 cm at the sides for ventilation.
- Do not place the machine in direct sunlight (not even behind glass) or near to a heat source (e.g. radiator or deep fryer).
- Place the machine in a room with a temperature between +5°C and +35°C.

3.3 Electrical connection

- Connect the plug of the machine to a high-voltage power supply (400 volts, 3 x 16 amps + N + PE).



When setting up the machine, make sure it is not positioned on the connection cable. This can damage the insulation and lead to a short-circuit.

3.4 Connection of cooling water



This paragraph only applies to water-cooled machines.

- Connect the supply hose to a washing machine tap (3/4" water tap with ventilation). The water pressure must be a minimum of 1 bar and a maximum of 3 bar.
- Connect the discharge hose to the discharge pipe.



When connecting, please observe the local water board connection conditions.

The machine has a check valve. This valve along with aerated faucet prevents the backflow of water into the water supply.



When setting up or moving the machine, make sure that the water supply and discharge hoses cannot bend or otherwise become blocked.



Make sure that no water can enter the machine. If water comes into contact with electrical parts, this can cause damage and/or danger.

3.5 Adjusting castors

The castors under the machine can be adjusted in height.



Make sure that the machine does not topple over when adjusting the castors.

1. Tighten all castors as far as possible.
2. Now **adjust** the castors so that the machine leans slightly forward (this allows rinsing and washing water to flow to the draining aperture at the front of the machine).



Do not unscrew the castors by more than 5 to 8 mm.

3. Place the front castors on the brake.



Make sure that the brake of the two front castors is secured after adjusting.

4 Machine Description

4.1 Function and products

The machine is only suitable for the commercial preparation of soft ice cream using water, ice cream mix as ingredients.

4.2 Machine overview

1. Operating panel 1
2. Operating panel 2
3. Operating panel 3
4. Emergency stop button
5. Refresh button 1
6. Refresh button 2
7. Combi head
8. Mix tanks
9. Syrup compartment



With operating panel 1 the left freezing cylinder is controlled, operating panel 3 controls the right freezing cylinder.



Refresh button 1 is used for the left freezing cylinder, refresh button 2 is used for the right freezing cylinder,



The machine has two mixtanks for two different flavours of ice cream. The flavour in the right mixtank is used for milkshakes.

Operating panel 1 and 3

- **OFF**
Press to switch off the machine; only the lights remain lit.



First press 'OFF' before changing the mode.



- **PASTEURISING**
Sets the machine to pasteurising mode. The ice cream mix in the cylinder and mix tank is pasteurised and the machine then switches to standby mode.
- **STANDBY**
Sets the machine to standby mode. The cylinder and mix tank are cooled to approx. 5°C.
- **RUN**
Sets the machine to operating mode. Ice cream can be dispensed.
- **WASH**
Sets the machine to wash mode and switches on the mixing apparatus in the cylinder.
- **- and +**
Selection keys to reduce and increase viscosity.
- **REPLENISH**
Control light (yellow); flashes if there is insufficient ice cream mix in the mix tank.
- **HEATING**
Control light (red); lights up during pasteurising.
- **STANDBY**
Control light (green); lights up if the machine is in standby mode.

Operating panel 2

- **1, 2, 3 and 4**
Selection keys for milkshake flavours.
- **AIR**
Switches the air compressor on or off.



'AIR' must always be switched on in operating mode.



Buffet operation (optiona)

1. Camouflaged buffet button.

The selection buttons only work if they are pressed simultaneously with the buffet button.



The buffet button prevents customers to operate the machine unintended.

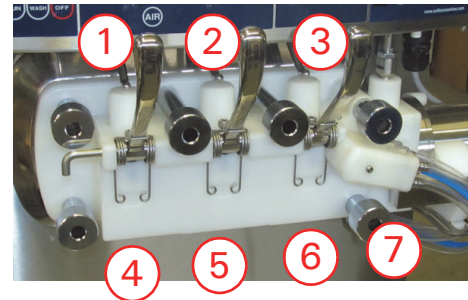


Combi head

1. Soft ice cream dispensing handle taste 1
2. Soft ice cream dispensing handle mixed taste 1 and 2
3. Soft ice cream dispensing handle taste 2

On the underside of the ice cream head you will find:

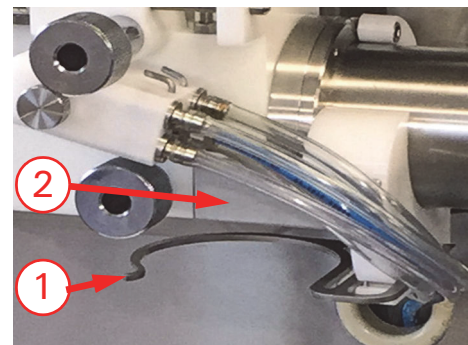
4. Soft ice cream dispensing spout taste 1
5. Soft ice cream dispensing spout mixed taste 1 and 2
6. Soft ice cream dispensing spout taste 2
7. Milkshake dispensing spout



Auto Portion Milkshake

With the Auto Portion Milkshake you are able to fill a milkshake cup automatically.

1. Cup holder (stainless steel)
2. APM sensor

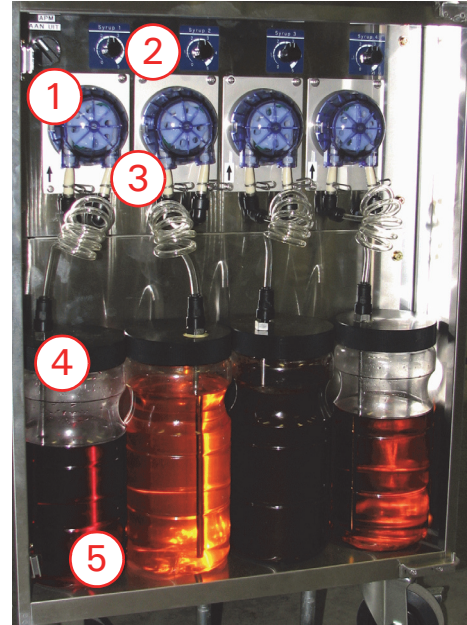


Syrup compartment

1. On/off switch APM

For each of the four milkshake flavours, the following components can be found in the syrup compartment:

2. Flavour control button
3. Syrup pump
4. Syrup tank lid
5. Syrup tank



Mix tank (2x)

1. Mix pump
2. Mix tank agitator
3. Air hoses



5 Operation


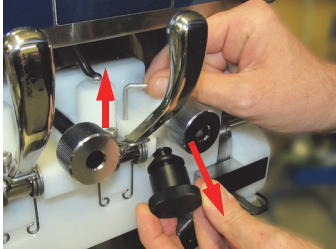

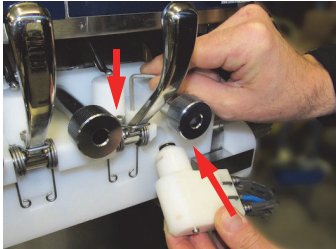


5.1 Start up (start of working day)



Be careful! Carry out the starting procedure for both freezing cylinders after each other.



First check whether the machine is in 'STANDBY' mode. If this is not the case, measure the temperature of the mix in the mix tank.
- If the temperature is higher than 7°C, empty, clean and disinfect the machine (see chapter 7 - 'Maintenance' on page 33)
- If the temperature is lower than 7°C, first pasteurise the machine before use.


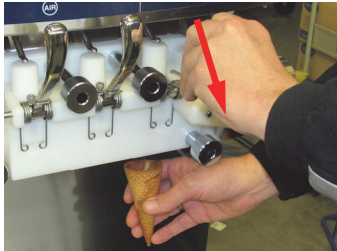
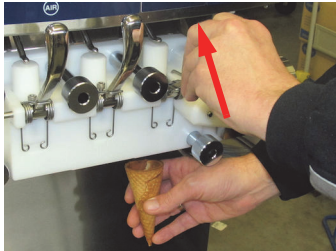
		
<p>1. Check whether the machine is in 'STANDBY' mode. If this is not the case, measure the temperature of the mix in the mix tank.</p> <ul style="list-style-type: none"> - If the temperature is higher than 7°C, empty, clean and disinfect the machine (see chapter 7 - 'Maintenance' on page 33). - If the temperature is lower than 7°C, first pasteurise the machine before use. 	<p>2. Remove the pasteurising plug.</p>	<p>3. Clean the siruphead and the hole in the combi-head with 80% alcohol spray.</p>
		
<p>4. Insert the syrup head in the combi-head.</p>	<p>5. Press 'OFF'.</p>	<p>6. Press 'WASH'.</p>

<p>7. Wait at least 10 minutes.</p>	<p>8. Press 'OFF'.</p>	<p>9. Press 'RUN'.</p>
<p>10. Wait till 2 horizontal lines are shown in the left display.</p>	<p>11. Dispense one or two ice creams, taste them and throw them away.</p>	<p>12. Dispense one milkshake, taste it and throw it away. The machine is now ready for use.</p>



Starting the machine after cleaning is described in chapter 7 - 'Maintenance' on page 33.



5.2 Dispensing soft ice cream

		
<p>1. Hold an ice cream cup or cone under the ice cream dispensing spout.</p>	<p>2. Pull the ice cream handle down fully. The ice cream is now dispensed.</p>	<p>3. Push the ice cream handle up fully.</p>

Here are a few tips for dispensing soft ice cream properly:

- If no ice cream or milkshake has been dispensed for some minutes, briefly press the 'refresh button' first before dispensing ice cream.
- A good balance between air and ice cream mix in the cylinder improves the quality of the soft ice cream.
- Dispense soft ice cream carefully at a steady, constant dispensing rate.
- Do not dispense large amounts of soft ice cream in succession.
- Give the machine the opportunity in good time to bring the viscosity of the soft ice cream up to the required level again.

5.3 Dispensing milkshake

		
<p>1. Place a cup in the cup holder.</p>	<p>2. Select the required flavour. The machine is set to choice 4 vanilla flavour as standard. The flavours for choice 1, 2, and 3 are at choice.</p>	



If you want to stop the automatic dispensing press one of the flavour selection buttons.

Here are a few tips for dispensing milkshake properly:

- The syrup tanks must be well-filled.
- Fully depress the milkshake pedal in one go.
- Do not dispense several milkshakes in quick succession. First fit the lid and straw and then dispense the next milkshake.
- Dispense milkshakes carefully!
- A good milkshake is dependent on good soft ice cream.

5.4 Switching off (end of working day)

The machine is not switched off in the same way each day. A choice can be made between switching off & standby and switching off & pasteurising.

The Dutch hygiene code gives the following guidelines for pasteurising:

- Pasteurising takes place after the mix has been topped up.
- Always allow the machine to pasteurise at the end of the day (with a low turnover rate, pasteurise at least every two days).
- Before starting work, check that pasteurisation has been performed correctly.
- Do not keep pasteurised mix for longer than 72 hours.
- Store mix at a temperature of 7°C or lower; preferably 4°C or lower.



The dealer advises you to follow the above guidelines.

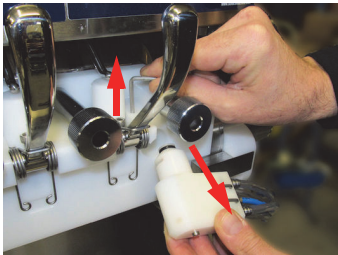

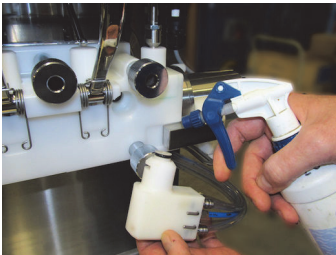

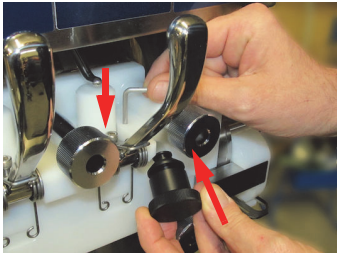


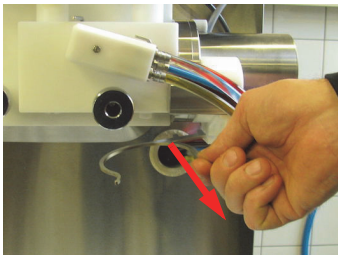



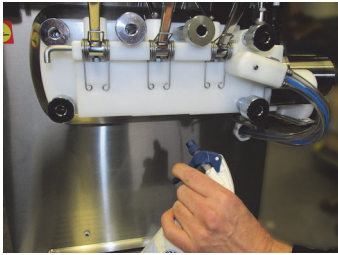

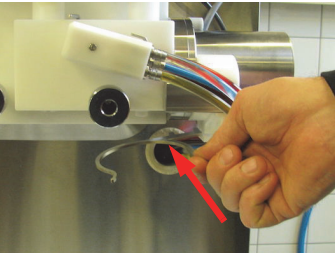
Always pasteurize both sides of the machine simultaneously.

5.4.1 Switching off & standby

<p>1. Press 'OFF'.</p>	<p>2. Press 'STANDBY'.</p>	<p>3. Remove the cup holder.</p>
<p>4. Clean the combi-head and machine using a brush and a clean cloth (preferably paper).</p>	<p>5. Disinfect the combi-head with 80% alcohol spray.</p>	<p>6. Clean the cup holder with a brush.</p>
<p>7. Place the cup holder.</p>		

5.4.2 Switching off & pasteurising

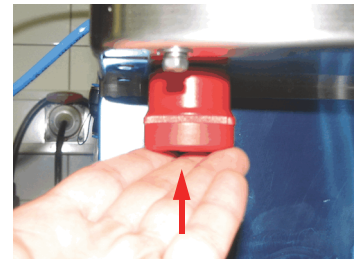
		
<p>1. Pull the syrup head out of the combi-head.</p>	<p>2. Clean the syrupi-head with a clean cloth. (preferably with paper)</p>	<p>3. Disinfect the syrup-head with 80% alcohol spray.</p>
		
<p>4. Clean the opening in the combi-head and disinfect the opening and the pasteurising plug with 80% alcohol spray.</p>	<p>5. Insert the pasteurising plug in the combi-head.</p>	<p>6. Press 'OFF'.</p>
		
<p>7. Press 'PASTEURISING'. The ice cream mix will now be pasteurised and the machine will then switch to 'standby' mode.</p>	<p>8. Remove the cup holder.</p>	<p>9. Clean the combi-head and machine with a brush and clean cloth (preferably with paper).</p>

		
<p>10. Disinfect the combi-head with 80% alcohol spray.</p>	<p>11. Clean the cup holder.</p>	<p>12. Place the cup holder.</p>

5.5 Emergency stop

The machine must be switched off immediately if people or machinery are at risk:

- **Press** the emergency stop button.
The entire machine stops immediately and the power is turned off. The emergency circuit is now in operation.



Press the emergency stop button immediately if people or machinery are at risk.

Resetting

Resetting the emergency stop button:

- **Rotate** the emergency stop button a quarter turn.
The machine can now be started up again.



First check why the emergency stop button was pressed and remedy the problem .

5.6 Switching on/off

The machine does not have an on/off button. To switch off the machine completely:

1. **Press** the emergency stop button.
2. **Pull** the plug out of the socket.

To switch on the machine:

1. **Insert** the plug in the socket.
2. **Reset** the emergency stop feature.



Do not switch off the machine at the end of the day; set it to 'PASTEURISING' or 'STANDBY'.

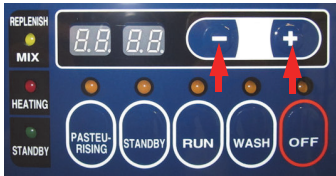


5.7 Changing the settings

5.7.1 Adjusting the viscosity



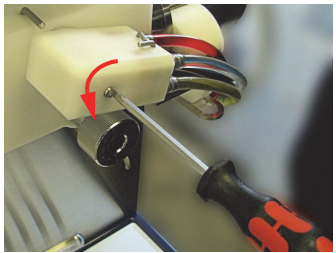
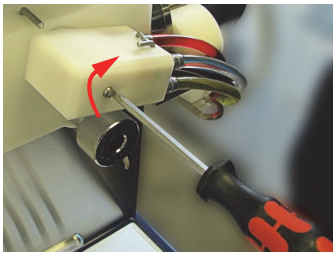
Use this function only during 'Run'.

The viscosity can be adjusted in half increments. On the display this is shown with a . (dot) after the last digit. For example, 1.6. is half more than 1.6

		
<p>1. Press '-' and '+' together until the display flashes. The display on the right now shows the set value.</p>	<p>2. Press '+' or '-' to increase or decrease the viscosity.</p>	<p>3. Wait approximately 5 seconds. The display on the right now shows the new set value.</p>

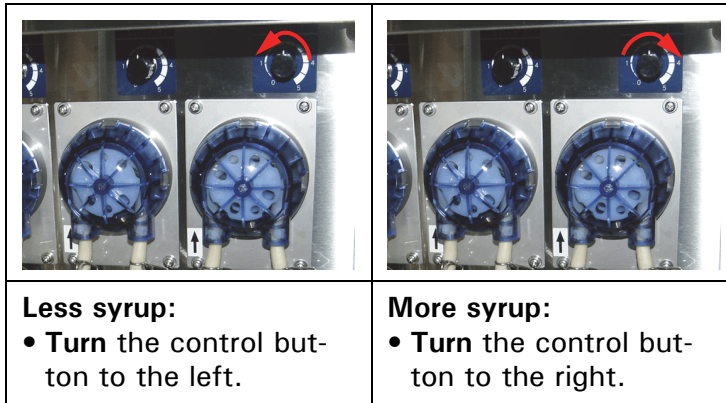
5.7.2 Adjusting milkshake thickness

The amount of water in the milkshake can be adjusted with the water control valve on the front of the syrup block.

	
<p>Thinner milkshake:</p> <ul style="list-style-type: none"> • Turn the water control value to the left. 	<p>Thicker milkshake:</p> <ul style="list-style-type: none"> • Turn the water control valve to the right.

5.7.3 Adjusting syrup quantity

The syrup quantity can be set per flavour using the flavour control buttons at the top of the syrup compartment.



6 Faults



You will probably be able to resolve some of the faults yourself without difficulty. First try to remedy faults yourself using the instructions in this manual before contacting the dealer.

6.1 Messages on display

The following messages can appear on the display:

Message	Problem
E02	Overloading of the cooling compressor.
E03	Machine is not receiving cooling water or cooling water is not being drained away.
E04	Overloading of the dashing motor.
E05	Temperature does not rise during pasteurising.
E06	Temperature in the cylinder is too high during pasteurising.
E07	Temperature in the mix tank is too high during pasteurising.
E08	Temperature in the cylinder is too high during defrosting.
E09	Overheating of the cooling compressor.
E10	Microswitch of the piston stays operated. Close the piston completely with the dispensing handle.
E11	Measurement error of temperature sensor H in cylinder.
E12	Measurement error of temperature sensor F in cylinder.
E13	Measurement error of temperature sensor G.
LO	Balance in cylinder disturbed; see faults table for remedies.

Resetting error messages

To reset an error message, switch off the machine using the emergency stop button, wait 10 seconds and switch on the machine again (see paragraph 5.5 on page 25).



If the error message remains, please contact the dealer.

6.2 How can I get the best yield from the machine

The machine must be running at a stable speed with a constant air/mix balance in order to achieve the best yield. If this air/mix balance is not constant, your ice cream will be soft or wet or your machine will make a rasping sound, you will experience a popping from the tap opening or the machine's display will show the indication LO. If one of these situations occurs, you should first check that the mix pump is still functioning properly before changing any of the machine's settings.

6.2.1 How can I check whether the mix pump is not causing a malfunction

The proper functioning of the mix pump is easy to check by then carrying out the following two actions:

1. Place a drop of water on the nozzle and draw off a tiny piece of ice cream. The drop of water should now be drawn into the nozzle valve.
2. Draw off a normal ice cream. The pump should stop within two-to-three strokes.

If this is not so in one or both of these cases, you should first remove the mix pump from the machine and clean it (see paragraph 7.3.14).

After replacing the mix pump in the machine, you should first draw off 20-to-25 ice creams before you can judge the result.

6.2.2 What should I do with a soft or wet and watery ice cream

A soft or wet and watery ice cream is normally caused by too little air in the ice cream. In some cases, too high a temperature of the ice cream, above -5°C can also make the ice cream soft or wet and watery. You should then carry out the following steps in order to make your ice cream a little drier and firmer:

1. Measure the temperature of your ice cream. If it is over -5°C , you should increase the viscosity by half a point (see paragraph 5.7.1).
2. If the temperature of the ice cream is below -5°C , check first if the hole in the nozzle on the nozzle valve is blocked. If this is the case, clean the nozzle thoroughly and replace the nozzle on the nozzle valve. The air/mix balance will then be restored and drawing off 20-to-25 ice creams will improve the quality of the ice cream.

If the soft or wet and watery ice cream was not caused by point 1 or 2, you should place a nozzle with a larger hole onto the nozzle valve.

The nozzles in your sparepart box go up in steps of 5. You should place the nozzle with the next higher number onto the nozzle valve. If for example, you use nozzle 70, you should fit nozzle 75.

The air/mix balance will then be improved automatically and drawing off 20-to-25 ice creams will improve the quality of the ice cream. If you do not see any improvement after drawing off 20-to-25 ice creams, place the next higher nozzle and repeat this process until you are able to draw off a dry and firm ice cream.

6.2.3 What should I do in case of rasping, popping or if the machine displays LO


Rasping, popping or LO in the display is almost always due to too much air in the cylinder. This leads to free air bubbles in the cylinder that pop out of the ice cream machine when drawing off an ice cream. You can solve this by placing a nozzle with a smaller hole onto the nozzle valve.

The nozzles in your sparepart box go down in steps of 5. You should place the nozzle with the next lower number from your sparepart box onto the nozzle valve. If for example, you use nozzle 80, you should fit nozzle 75.

The air/mix balance will then automatically improve and the rasping, popping or the LO in the display will be reduced or stop after drawing off 20-to-25 ice creams. If you do not see any improvement after drawing off 20-to-25 ice creams, place the next lower nozzle and repeat this process until there is no more rasping, popping or LO in the display.

6.3 Faults table

Problem	Cause	Remedy
LO appears on the left or right display.	Too much air in the cylinder.	See paragraph 6.2.3 'What should I do in case of rasping, popping or if the machine displays LO'.
The 'AIR' light is flashing.	The pressure in the cylinder is too low, the mix pump is malfunctioning.	Release the pressure of the cylinder. Remove, clean and disinfect the mix pump Reinstall the the mix pump, pressurise the cylinder and start up the machine.
Machine is not responding and no lights are lit up.	The emergency stop button has been pressed.	Reset the emergency stop feature.
	Fuse(s) in meter box is (are) faulty.	Replace fuse(s) in the meter box.
	Phase fault protection relay is energized.	Incorrect phase connection in the meter box.
Scraping and popping.	Too much air in the cylinder.	See paragraph 6.2.3 'What should I do in case of rasping, popping or if the machine displays LO'.

Problem	Cause	Remedy
The ice cream is too soft (not caused by excessive sales).	Not much air in the ice cream (not caused by few sales over a long period).	See paragraph 6.2.3 'What should I do in case of rasping, popping or if the machine displays LO'.
The machine is vibrating abnormally.	The power supply is disrupted or drive belt(s) is (are) faulty.	Please contact the dealer.
Ice cream is leaking through behind the combi head.	The components have not been fitted correctly (cap nuts are loose).	Fit the components properly. Check whether the nozzle and nozzle tube are clean.
	Gasket is worn	Check and replace if necessary.
Milkshake is not being mixed.	The black plug is mounted in the wrong way.	Check the plug. Feel the casing of the motor to check if the motor is running.
	The fuse of the milkshake motor is broken.	Please contact the dealer.
Sirup pumps are not running.	Broken fuse, broken wiring or other defect.	Please contact the dealer.
The green 'STANDBY' light does not light up after pasteurising. The display should show  after pasteurising.	Mix tank agitator not working (error message EO5).	Check whether agitator is running (it should run on every 3-to-4 minutes). If not, please contact the dealer.
	Mix tank lid does not close properly (heat loss) (error message EO5).	Fit mix tank lid properly.
	The 'OFF' light is lit. There was a power failure that turned off the whole machine.	Check whether the ice mix is bad. If so, empty the machine completely and clean and disinfect the whole machine. If not, pasteurise the machine before use.

Problem	Cause	Remedy
Dirt is dripping from the little hole at the bottom of the shaker motor.	The seal in the milkshake motor is worn.	Please contact the dealer as soon as possible. The milkshake motor may become irreparably damaged if you continue to dispense milkshakes!

7 Maintenance

7.1 Safety instructions

- Do not use a water hose or high-pressure cleaner to spray the machine clean.
- Clean and disinfect the machine at least once every six weeks with the recommended cleaning and disinfecting agents.
- Decalcify the machine every 2nd and 4th cleaning depending on the pollution, but atleast twice a year.
- Use prescribed lubricants only.



Maintenance work may only be done by trained staff.



Regular maintenance ensures good quality ice cream and a properly functioning machine.

7.2 General instructions

The machine must be cleaned and disinfected at least once every six weeks. Between 2 to 2.5 hours are needed for this. Below are a number of general instructions for how to clean and disinfect the machine correctly.



Always clean and pasteurize both sides of the machine simultaneously.

7.2.1 Requirements

The following items are needed when cleaning the machine:

- Buckets and brushes
- Tea towel or kitchen roll
- Cleaning agent (recommended: Nissei Cip Clean)
- Disinfecting agent (recommended: Nissei Algides)
- O ring remover and piston puller
- 80% alcohol spray
- Lubricant (Petrogel)



The amount of Petrogel on the saucer is enough to lubricate all the parts of the machine.



Every 2nd and 4th cleaning depending on the pollution:

- Decalcify agent (recommended: Nissei Descaler)

7.2.2 Preventive maintenance

Preventive maintenance can be carried out by the operator when cleaning the machine.

The following parts must be checked:

- Rubbers and O rings of the mix pump and ice cream head.
We advise you to replace these twice a year.
- Scraper blades of the cylinder beater. These must be sharp enough to scrape the ice from the cylinder wall.
We advise you to replace these once a year.



Contact the dealer to order spareparts.



Always replace all O rings together.



The O rings can only be order in a complete set. See annex 2 - 'Spare parts' on page 62 for the product number.

7.2.3 Cleaning and disinfecting

We advice to use to use cleaning agent and disinfecting agent mentioned below:

- Cleaning agent: Nissei Cip Clean
- Disinfecting agent: Nissei Algides

When cleaning and disinfecting all components:

- **Rinse** away as much ice cream mix as possible with cold water.
- **Clean** further with brush and cleaning solution and allow the components to stand in the cleaning solution for 5 minutes.
- **Rinse** thoroughly with lukewarm water (2x).
- **Place** the components in the disinfecting solution for 5 minutes.
- **Rinse** thoroughly with cold water (2x).



Clean an disinfect your hands thoroughly with alcohol 80% before touch disinfected parts.

- **Dry** the components as much as possible with a clean towel (preferably paper).
- **Place** the parts on a clean tea towel or sheet of kitchen paper.

Cleaning solution

- **Make** a solution of 100 ml Nissei Cip Clean and 10 litres of warm water in a clean bucket.



During cleaning, regularly change the cleaning solution.

Disinfecting solution

- **Make** a solution of 125 ml Nissei Algides and 10 litres of cold water in a clean bucket.



During disinfecting, regularly change the disinfecting solution.

7.2.4 Decalcify

The machine, the cylinder beater and all cleaned stainless steel parts of the mixpump must be decalcified every 2nd and 4th cleaning depending on the pollution, but at least twice a year. We advice to use to use the decalcify agent mentioned below:

- Decalcify agent: Nissei Descaler



Decalcify the machine, the cylinder beater and all cleaned stainless steel parts of the mixpump every 2nd and 4th cleaning depending on the pollution, but at least twice a year.

Decalcify solution

- Make a solution of 1 liter Nissei Descaler and 10 litres of cold water.

7.3 (Dis)assembling, cleaning and disinfecting the machine



Please read the general instructions on cleaning and disinfecting before starting.

7.3.1 Procedure

(Dis)assembling, cleaning and disinfecting the machine is an intensive task. The following sequence is recommended for an effective procedure:

1. Defrost and drain cylinder (left and right).
2. Remove mix pump and mix tank agitator (left and right).
3. Drain mix tank (left and right).
4. Clean mix tank and cylinder (left and right).
5. Decalcify the machine (every 2nd and 4th cleaning depending on the pollution, but at least twice a year).
6. Remove combi head.
7. (Dis)assemble, clean and disinfect combi head.
8. (Dis)assemble milkshake motor.
9. (Dis)assemble, clean and disinfect cylinder beater and cream seal.
10. Fit combi head.
11. Disinfect machine.
12. Clean, rinse and disinfect mix pump parts (left and right).
13. Start up machine (left and right).
14. Clean and rinse syrup head and hoses.

7.3.2 Defrosting and draining cylinder (left and right)

<p>1. Press 'OFF'.</p>	<p>2. Press 'PASTEURISING'.</p>	<p>3. Wait 10 minutes.</p>
<p>4. Press 'OFF'.</p>	<p>5. Press the emergency stop button.</p>	<p>6. Wait 10 seconds.</p>
<p>7. Reset the emergency stop.</p>	<p>8. Draw the ice cream mix out of the cylinder. Continue drawing product until there is no more pressure behind the ice cream mix.</p>	



Throw away the old ice cream mix. Do NOT re-use.

7.3.3 Removing mix pump and mix tank agitator (left en right)



Make sure there is no more pressure in the cylinder before removing the mix pump from the mix tank.

<p>1. Disconnect the air hoses.</p>	<p>2. Remove the mix pump. Click the pump loose by rotating it anti-clockwise and then pull it straight upwards.</p>	<p>3. Place an air hose over the two air tubes.</p>
<p>4. Remove the agitator.</p>		

7.3.4 Draining the mix tank (leftand right)

<p>1. Press 'WASH'.</p>	<p>2. Drain all ice cream mix from the machine.</p>	<p>3. Press 'OFF'.</p>



Throw away the old ice cream mix. Do NOT re-use.

7.3.5 Cleaning the mix tank and cylinder (left and right)

<p>1. Fill the mix tank completely with cold water.</p>	<p>2. Press 'WASH'.</p>	<p>3. Clean the mix tank.</p>
<p>4. Press 'OFF'.</p>	<p>5. Drain all the water out of the machine.</p>	<p>6. Fill the mix tank completely with a cleaning solution.</p>
<p>7. Clean the mix tank.</p>	<p>8. Press 'WASH'.</p>	<p>9. Wait 5 minutes.</p>
<p>10. Press 'OFF'.</p>	<p>11. Drain all cleaning solution out of the machine.</p>	<p>12. Fill the mix tank with clean lukewarm water.</p>

<p>13. Press 'WASH'.</p>	<p>14. Wait 5 minutes.</p>	<p>15. Press 'OFF'.</p>
<p>16. Drain all the water out of the machine.</p>	<p>17. Repeat steps 12 to 16.</p>	



Do not return the mix pumps to the mix tanks yet. This is done during start up.







7.3.6 Decalcify the machine (left and right)





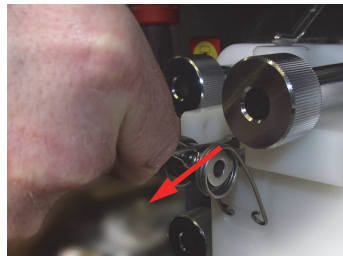
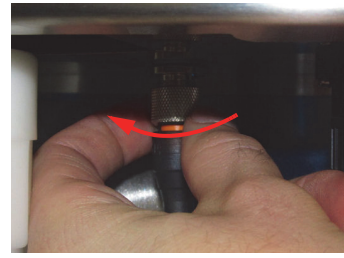
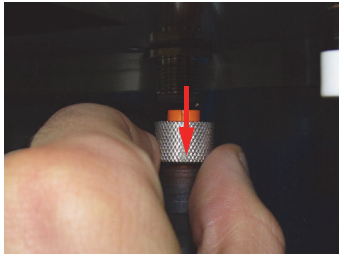


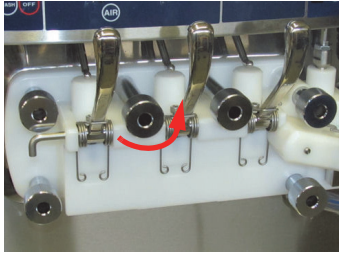

Decalcify the machine every 2nd and 4th cleaning depending on the pollution, but at least twice a year.



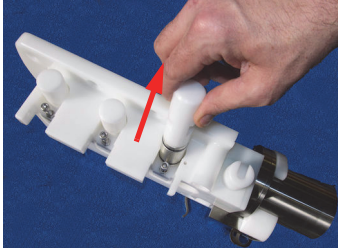
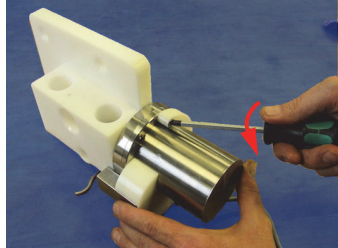
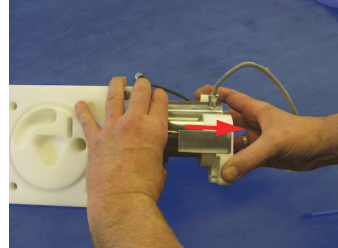
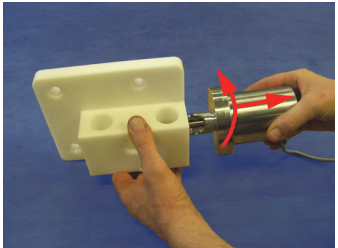
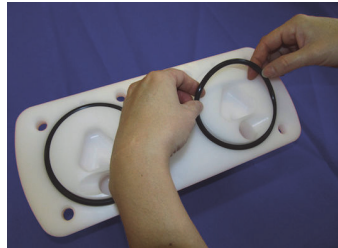
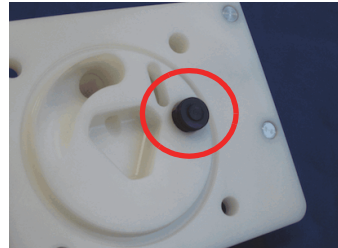
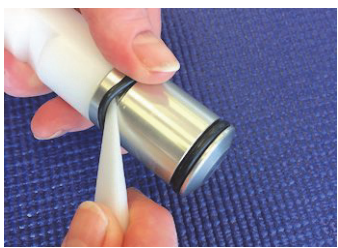




Place all the cleaned stainless steel parts of the mix pump in the mix tank so these are decalcified too..

 <p>decalcify solution</p>	 <p>10 min</p>	
<p>1. Fill the mix tank completely with decalcify solution.</p>	<p>2. Wait for at least 10 minutes.</p>	<p>3. Drain all the decalcify solution out of the machine.</p>
 <p>cold water</p>		 <p>cold water</p>
<p>4. Fill the mix tank completely with cold water.</p>	<p>5. Drain all the water out of the machine.</p>	<p>6. Repeat steps 4 to 5.</p>

7.3.7 Removing the combi head

		
<p>1. Press the 'emergency stop' so the machine is shut down completely.</p>	<p>2. Remove the locking pins from the dispensing handles. (Be careful! Remove the dispensing handles one by one. Hold the dispensing handles firmly while removing them.</p>	<p>3. Remove the dispensing handles.</p>
		
<p>4. Loosen the APM plug.</p>	<p>5. Pull the APM plug straight downwards and out.</p>	<p>6. Loosen the shake motor gland nut .</p>
		
<p>7. Pull the shake motor plug straight downwards and out.</p>	<p>8. Loosen the six bolts.</p>	<p>9. Remove the combi-head from the machine.</p>







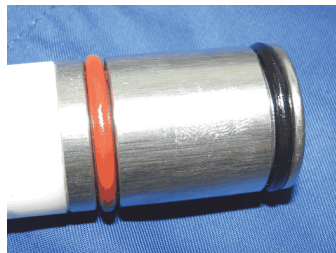
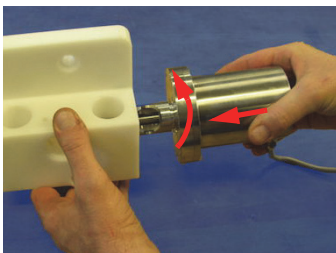
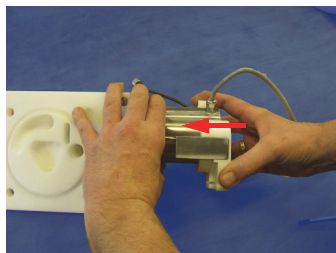
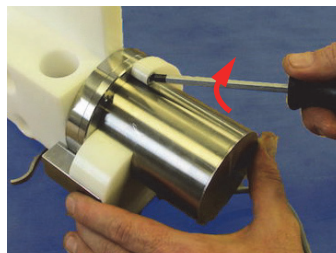
7.3.8 Disassembling, cleaning and disinfecting the combi head

		
<p>1. Remove the four pistons out of the combi-head.</p>	<p>2. Loosen the allen bolts.</p>	<p>3. Remove the APM unit from the milkshake motor.</p>
		
<p>4. Pull the milkshake motor from the combi-head with a rotating movement.</p>	<p>5. Remove the gaskets on the back of the combi-head.</p>	<p>6. Push the non-return valve backwards and out of the combi-head.</p>
		
<p>7. Remove the O rings and H ring of the pistons.</p>	<p>8. Remove the valve hose from the non-return valve.</p>	<p>9. Remove the two O rings from the non-return valve.</p>
 <p>cleaning and disinfecting</p>	 <p>Do not submerge the APM unit in water, but clean it with a brush and (moist) cloth. Otherwise it will be seriously damaged!</p>	
<p>10. Clean and disinfect all components and dry them carefully with a clean towel (preferably paper). (see paragraph 7.2.3)</p>		

7.3.9 (Dis)assembling, cleaning and disinfecting the milkshake motor

<p>1. Remove the locking screw.</p>	<p>2. Carefully pull the brush housing from the milkshake motor.</p>	<p>3. Remove the O rings from the brush housing.</p>
	<p>cleaning and disinfecting</p>	
<p>4. Remove the O ring from the milkshake motor.</p>	<p>5. Clean and disinfect all components and dry them carefully with a clean towel (preferably paper). (see paragraph 7.2.3)</p>	<p>6. Lubricate the O rings.</p>
<p>7. Fit the O rings to the brush housing.</p>	<p>8. Fit the O ring to the milkshake motor.</p>	<p>9. Carefully fit the brush housing to the milkshake motor.</p>
	<p>Do not submerge the milkshake motor in water, otherwise it will be seriously damaged!</p>	
<p>10. Fit the locking screw.</p>		

7.3.10 Fitting the combi-head

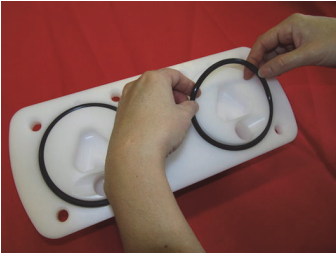

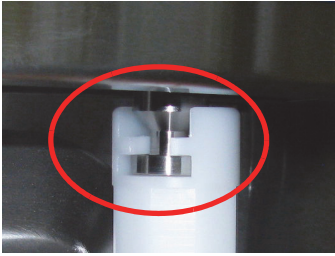
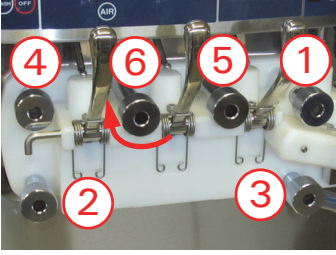



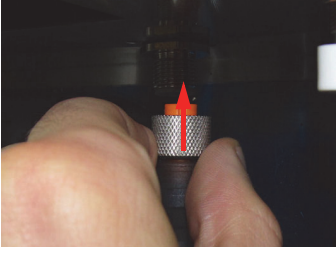
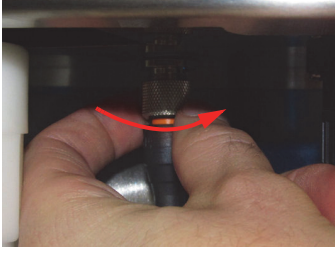
		
<p>1. Fit the valve hose to the non-return valve. This must NOT be lubricated!</p>	<p>2. Fit the two O rings to the non-return valve. These must NOT be lubricated!</p>	<p>3. Insert the non-return valve in the combi-head.</p>
		
<p>4. Lubricate the O-rings for the pistons.</p>	<p>5. Lubricate the H-ring for the central piston.</p>	<p>6. Lubricate the grooves for the O-rings.</p>
		
<p>7. Fit the two O-rings on both pistons.</p>	<p>8. Fit the H-ring on the central ice cream piston.</p>	<p>9. Fit the O-rings on the milkshake piston. Follow the correct fitting sequence</p>
		
<p>10. Insert the milkshake motor into the combi-head with a rotating movement.</p>	<p>11. Place the APM unit at the milkshake motor.</p>	<p>12. Tighten the allen bolts.</p>

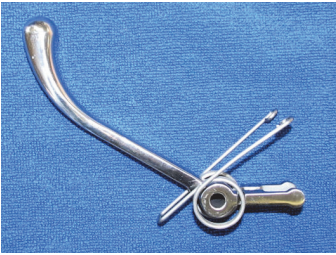
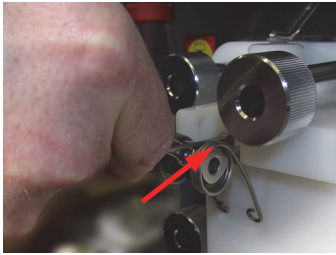
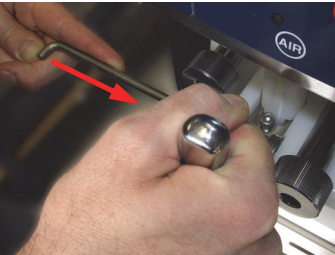

<p>13. Fit the four pistons in the combi-head.</p>	<p>14. Place the locking pin for the syrup head.</p>	

7.3.11 (Dis)assembling, cleaning and disinfecting the cylinder beater (left and right)







<p>1. Remove the beater from the cylinder.</p>	<p>2. Remove the cream seal from the drive shaft at the back of the cylinder.</p>	<p>3. Clean the (outside of) the cylinder.</p>
	<p>cleaning and disinfecting</p>	
<p>4. Disassemble the beater.</p>	<p>5. Clean and disinfect all components and dry them carefully with a clean towel (preferably paper). (see paragraph 7.2.3)</p>	<p>6. Lubricate the cream seal.</p>
<p>7. Fit the cream seal to the drive shaft.</p>	<p>8. Assemble the beater.</p>	<p>9. Insert the beater in the cylinder.</p>

7.3.12 Fitting the ice cream head






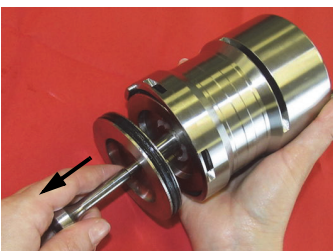
		
<p>1. Attach the gaskets to the back of the ice cream head. DO NOT lubricate it!</p>	<p>2. Place the combi head on the machine. (Be careful! The pin for the headprotection must be pressed upwards. Place the ice cream head in front of the cylinder correctly.</p>	<p>3. Make sure the milk shake dispensing piston fits the joint correctly.</p>
		
<p>4. Loosely tighten the six bolts in the sequence shown. Then tighten firmly by hand following the same sequence.</p>	<p>5. Place the locking pin of the syrup head.</p>	<p>6. Place the plug of the milkshake motor.</p>
		
<p>7. Tighten the plug of the milkshake motor.</p>	<p>8. Place the plug of the APM.</p>	<p>9. Tighten the plug of the APM.</p>

		
<p>10. Fit the spring onto the dispensing handle. (Be careful! Fit the spring as shown on the picture.)</p>	<p>11. Fit the dispensing handles in the ice cream head. (Be careful! Hold the dispensing handles till they are in place.</p>	<p>12. Reattach the locking pin for the dispensing handle. (Be careful! The dispensing handle must return to the close position by itself.)</p>
		
<p>13. Repeat steps 10 to 12 for the remaining dispensing handles.</p>		


7.3.13 Disinfecting the machine (left and right)


 <p>disinfecting solution</p>	 <p>5 min</p>	
<p>1. Fill the mix tank completely with disinfecting solution..</p>	<p>2. Wait at least 5 minutes.</p>	<p>3. Drain all the disinfecting solution out of the machine.</p>
 <p>cold water</p>		 <p>cold water</p>
<p>4. Fill the mix tank completely with cold water.</p>	<p>5. Drain all the water out of the machine.</p>	<p>6. Repeat steps 4 to 5 twice.</p>

7.3.14 (Dis)assembling, cleaning and disinfecting the mix pump (left and right)

		
<p>1. Pull the locking pins out of the pump.</p>	<p>2. Remove the pump foot from the pump.</p>	<p>3. Remove the nozzle tube.</p>
		
<p>4. Remove the nozzle from the tube.</p>	<p>5. Turn the piston puller in the piston.</p>	<p>6. Pull the piston out of the pump housing.</p>

<p>7. Remove the piston puller.</p>	<p>8. Loosen the top disc from the shaft.</p>	<p>9. Slide the middle disc from the shaft.</p>
<p>10. Remove the O rings from the outside of the discs.</p>	<p>11. Remove the O ring from the shaft.</p>	<p>12. Remove the two O rings on the inside of the middle disc.</p>
<p>13. Remove the three O rings from the pump foot.</p>	<p>14. Remove the valve hose from the pump foot.</p>	<p>15. Remove the mix valve from the pump foot.</p>
<p>cleaning and disinfecting</p>		
<p>16. Clean and disinfect all components and dry them carefully with a clean towel (preferably paper). (see paragraph 7.2.3)</p>	<p>17. Fit the valve hose to the pump foot. DO NOT lubricate it!</p>	<p>18. Fit the mix valve to the pump foot. DO NOT lubricate it!</p>

		
<p>19. Fit the 3 O rings to the pump foot. DO NOT lubricate it!</p>	<p>20. Lubricate all O rings with Petrogel.</p>	<p>21. Fit the thick O ring to the bottom disc.</p>
		
<p>22. Fit the O rings to the outside of the top disc.</p>	<p>23. Fit the two O rings to the outside of the middle disc.</p>	<p>24. Fit the O rings to the inside of the middle disc.</p>
		
<p>25. Fit the O ring to the shaft.</p>	<p>26. Lubricate the shaft.</p>	<p>27. Lubricate the inner O rings of the middle disc.</p>
		
<p>28. Slide the middle disc over the shaft. Attention, the big ring of the middle disc too the bottomside.</p>	<p>29. Turn the top disc onto the shaft.</p>	<p>30. Lubricate the O rings of the bottom and upper disc well once more.</p>

		
<p>31. Slide the middle disc against the bottom disc.</p>	<p>32. Fit the piston package into the pump housing. Push the piston package into the housing as far as it will go.</p>	<p>33. Fit the nozzle tube.</p>
		
<p>34. Attach the pump foot to the pump. Ensure a proper alignment of the nozzle behind the ridge.</p>	<p>35. Insert the locking pins through the pump housing.</p>	<p>36. Attach the nozzle to the tube.</p>



Do not return the mixpumps to the mix tanks yet. This is done during start up.

7.3.15 Starting up the machine (left and right)



For optimum hygiene, it is recommended that you start the machine up with new ice cream mix. Do not use old ice cream mix

<p>1. Reset the emergency stop.</p>	<p>2. Press 'OFF'.</p>	<p>3. Fit the agitator.</p>
<p>4. Fill the mix tank with 1,2 liter of ice cream mix.</p>	<p>5. Remove the air hose.</p>	<p>6. Install the mix pump in the mix tank.</p>
<p>7. Connect the air hoses.</p>	<p>8. Fill the mix tank with ice cream mix.</p>	<p>9. Press 'WASH'.</p>
<p>10. Push the dispensing handle for ice cream downwards until ice cream mix comes out of the ice cream head and the mix pump starts pumping.</p>	<p>11. Wait at least 10 minutes.</p>	<p>12. Press 'OFF'.</p>

<p>13. Press 'RUN'.</p>	<p>14. Wait until 2 horizontal lines are shown in the left display.</p>	<p>15. Dispense one or two ice creams from all three dispensing spouts, taste them and throw them away.</p>
<p>16. Dispense one milkshake, taste it and throw it away. The machine is now ready for use.</p>		


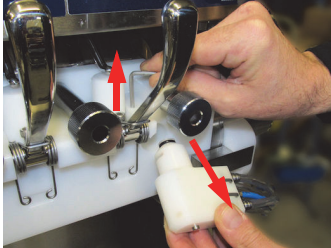
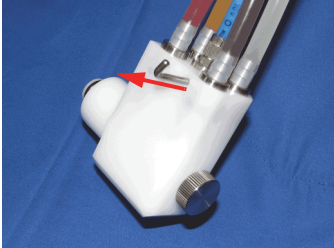
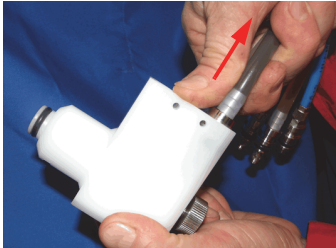
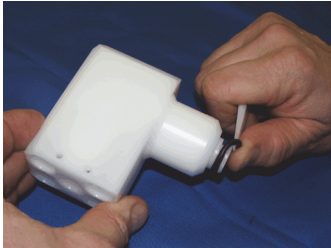
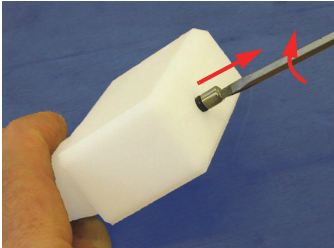

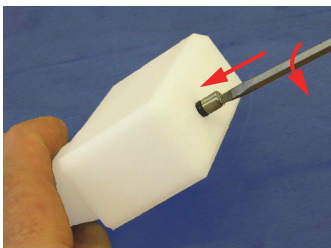
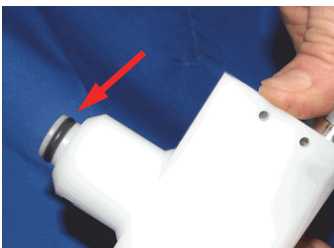


When dispensing product, air may still be expelled the first few times. This stops once a number of ice creams have been dispensed.


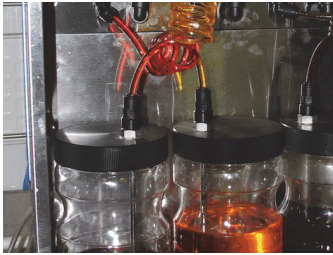




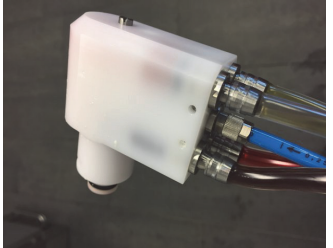
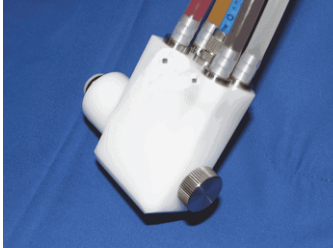
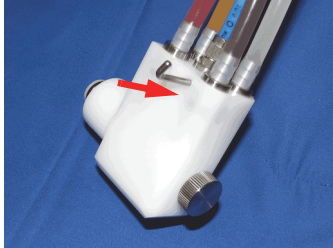
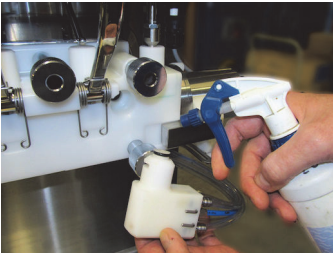

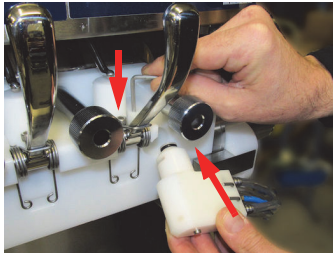
7.3.16 Clean and rinse syrup head and hoses



These operations must be carried out once every three months (once every two cleanings).

		
<p>1. Press 'OFF'.</p>	<p>2. Remove the syrup head from the combi-head.</p>	<p>3. Pull the two locking pins from the syrup head.</p>
		
<p>4. Disconnect the syrup hoses and the water hose.</p>	<p>5. Remove the O ring from the syrup block.</p>	<p>6. Unscrew the water control valve from the syrup block.</p>
		
<p>7. Clean and disinfect all components and dry them carefully with a clean towel (preferably paper). (see paragraph 7.2.3)</p>	<p>8. Screw the water control valve into the syrup block.</p>	<p>9. Fit the O ring to the syrup block. DO NOT lubricate it!</p>

<p>10. Hang all the syrup hoses in a empty bucket.</p>	<p>11. Unscrew all the lids from the syrup tanks.</p>	<p>12. Hang all the tubes from the lids in a bucket of hot water.</p>
<p>13. Press '1'.</p>	<p>14. Wait till the flushing has stopped.</p>	<p>15. Repeat steps 13 and 14 for the other flavours.</p>
<p>16. Repeat steps 12 to 15 twice with cleaning solution.</p>	<p>17. Wait at least 5 minutes.</p>	<p>18. Repeat steps 12 to 15 twice with lukewarm water.</p>
<p>19. Remove the syrup pipes from the bucket.</p>	<p>20. Press '1'.</p>	<p>21. Wait till the flushing has stopped.</p>

		
<p>22. Repeat steps 20 and 21 for the other flavours.</p>	<p>23. Tighten the lids on the syrup tanks.</p>	<p>24. Press '1'.</p>
		
<p>25. Wait till syrup flows out from the hoses.</p>	<p>26. Press '1'.</p>	<p>27. Repeat steps 24 to 26 for the other flavours.</p>
		
<p>28. Connect the syrup hoses to the syrup head such that the darkest colors are closed to the combi-head.</p>	<p>29. The water hose must be placed in the middle.</p>	<p>30. Insert the two locking pins in the syrup head.</p>
		
<p>31. Clean the siruphead with 80% alcohol spray.</p>	<p>32. Disinfect the opening in the combi-head with 80% alcohol spray.</p>	<p>33. Insert the syrup head in the combi-head.</p>

8 Transportation and storage



Check that all connections have been disconnected before moving the machine.

8.1 Transportation

The following rules must be observed during transportation:

- Always transport the machine upright.
- Use suitable lifting gear. Do not lift the machine manually.



If necessary, have the machine transported by a specialist company. They have suitable lifting gear and transportation means.

8.2 Storage

The following rules must be observed during storage:

- First clean the machine thoroughly.
- Store the ice cream head and mix pump disassembled.
- The storage area must be dry with an air humidity level of 45-75%.
- The ambient temperature must be between 4°C and 50°C.
- The storage area must be free of dust or the machine and parts must be covered with plastic film.

9 Discarding

9.1 Environmental factors

The following must be observed:



When discharging the machine it must be handed in to an authorized waste collection point for electrical equipment.



Here the machine is disposed of in an environmentally friendly manner and materials are reused.



It must be taken into account that refrigerant gasses are present in the machine.

Annex 1 Specifications

Machine dimensions	
Height	1500 mm
Width	540 mm
Depth	840 mm
Weight	circa 250 kg

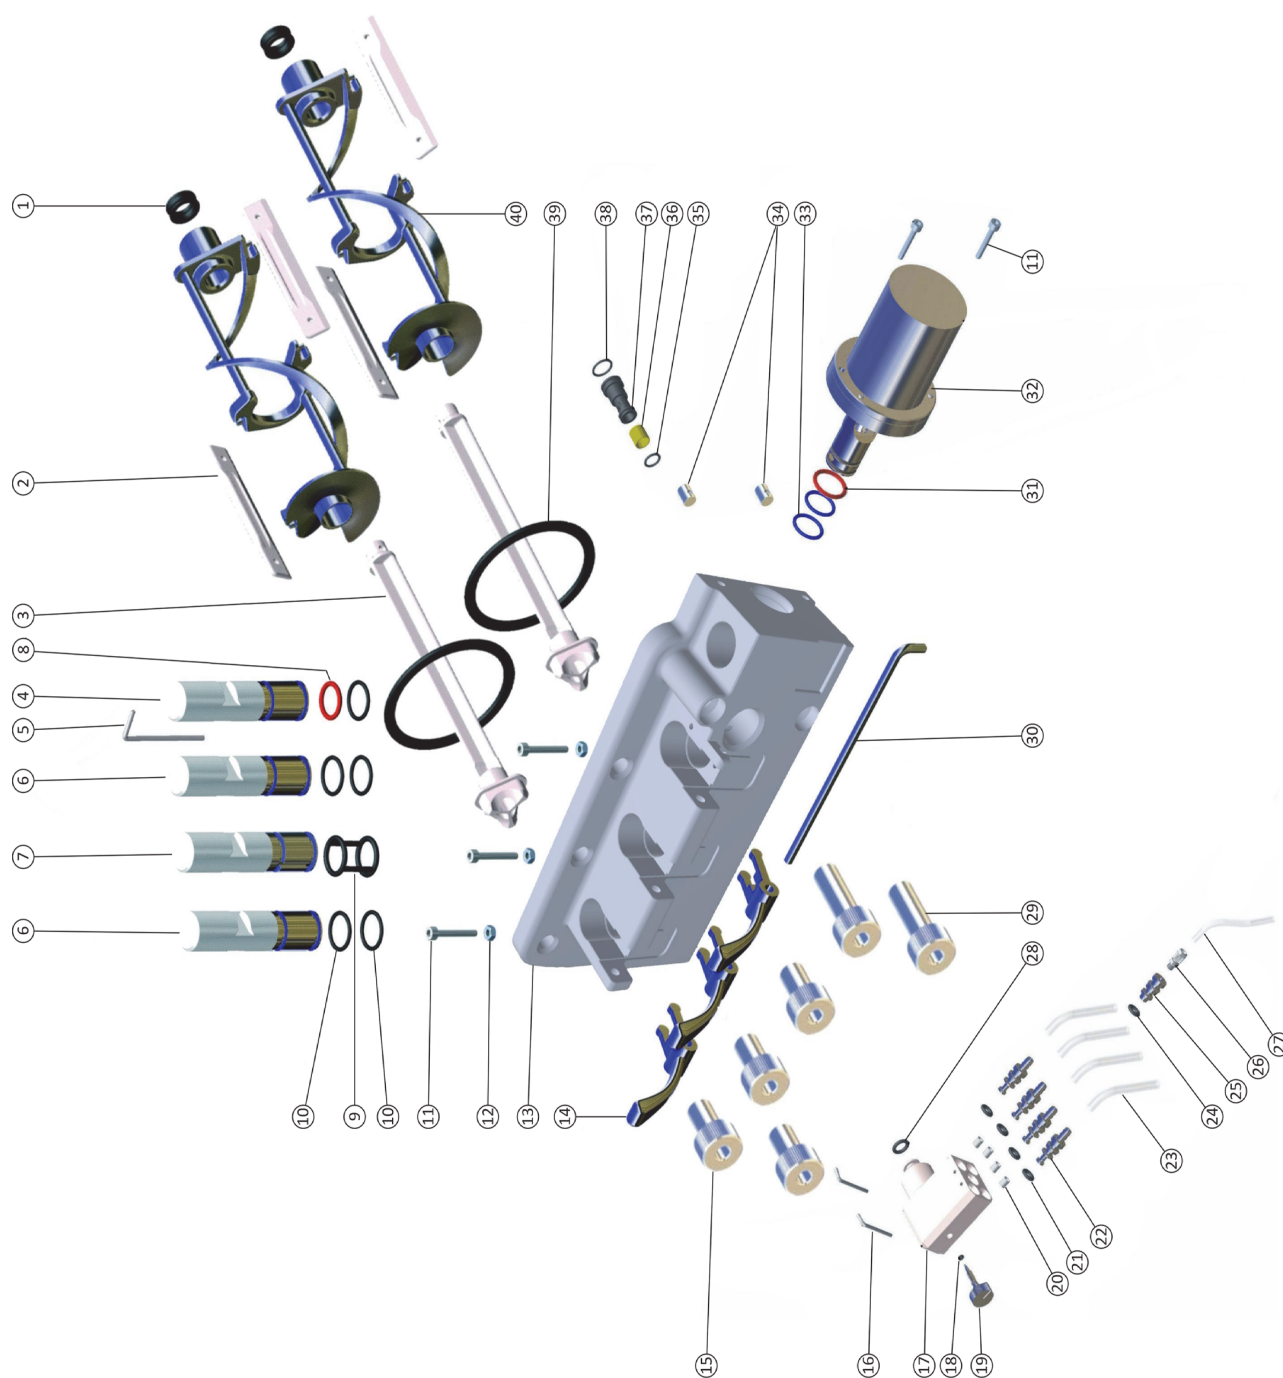
Connection details	
Electrical	400 V 3 x 16 amp + N + PE
Water pressure	Min. 1 bar/max. 3 bar
Ambient temperature	+ 5°C to + 35°C

Consumption details	
Electrical	2x 1.6 kWh
Cooling water	2x 40 m ³ /year

Specifications	
Dispensing capacity	Approx. 30 + 30 litres/hour
Soft ice cream flavours	2 + mixed
Milkshake flavours	4
Cylinder capacity	2x 2.5 litres
Mix tank capacity	2x 10 litres

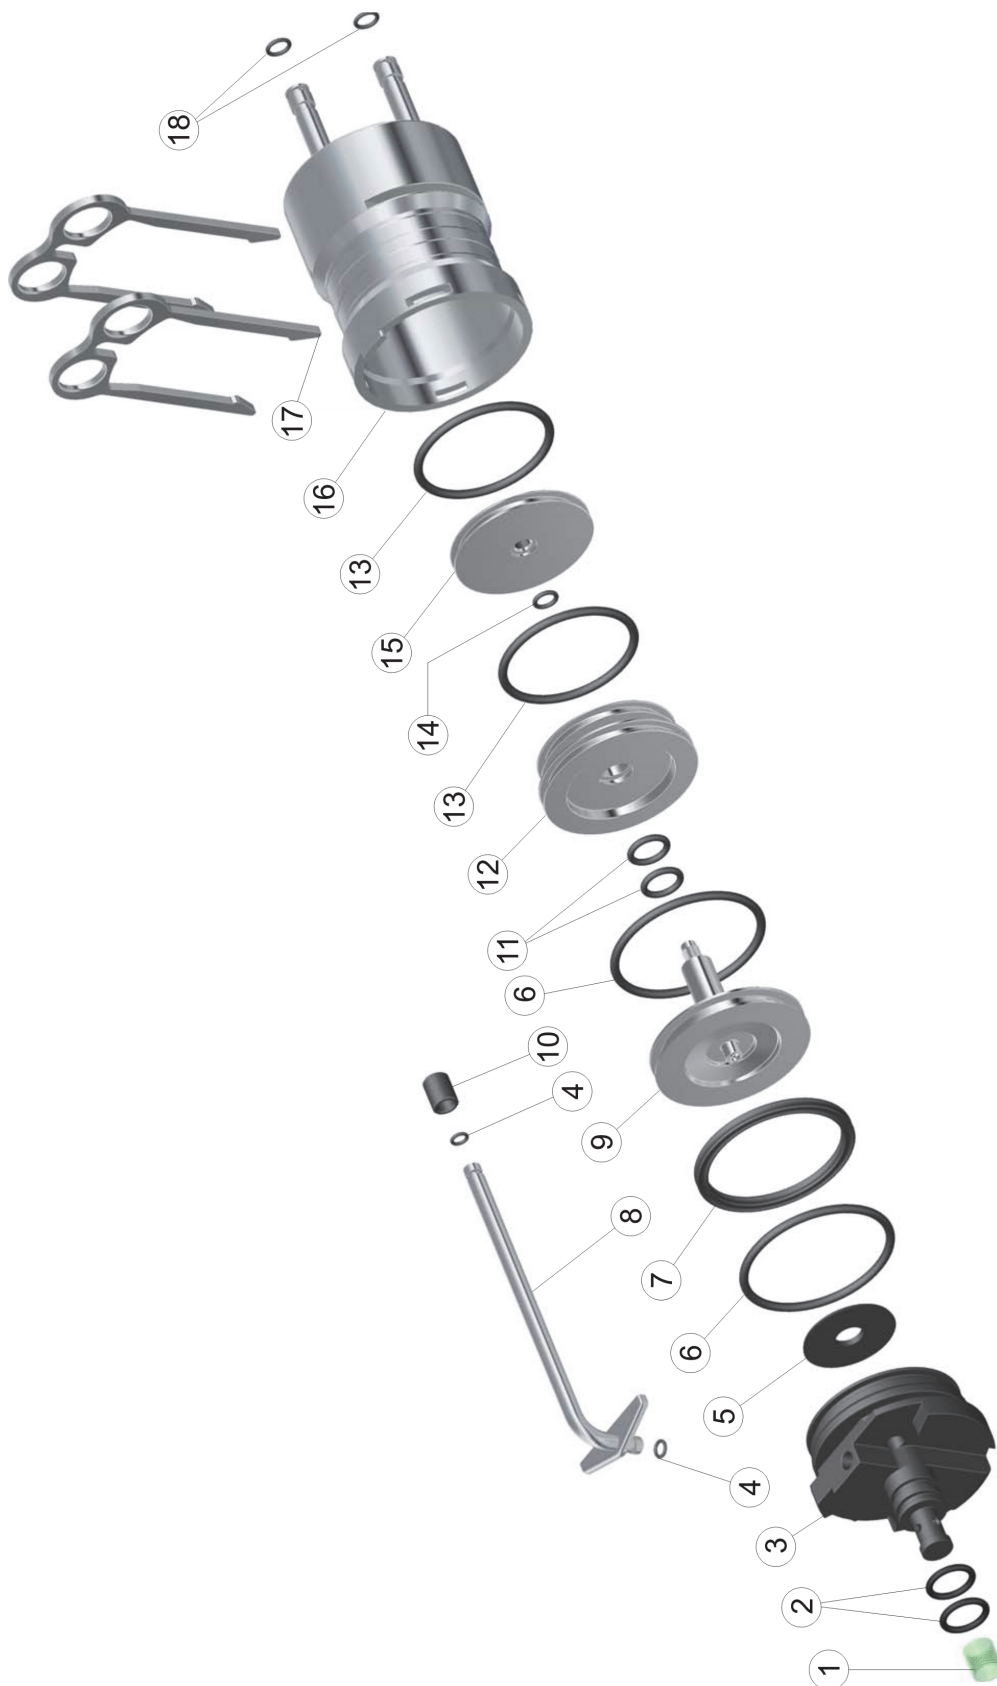
Annex 2 Spare parts

A2.1 Combi-head, syrup block and beater



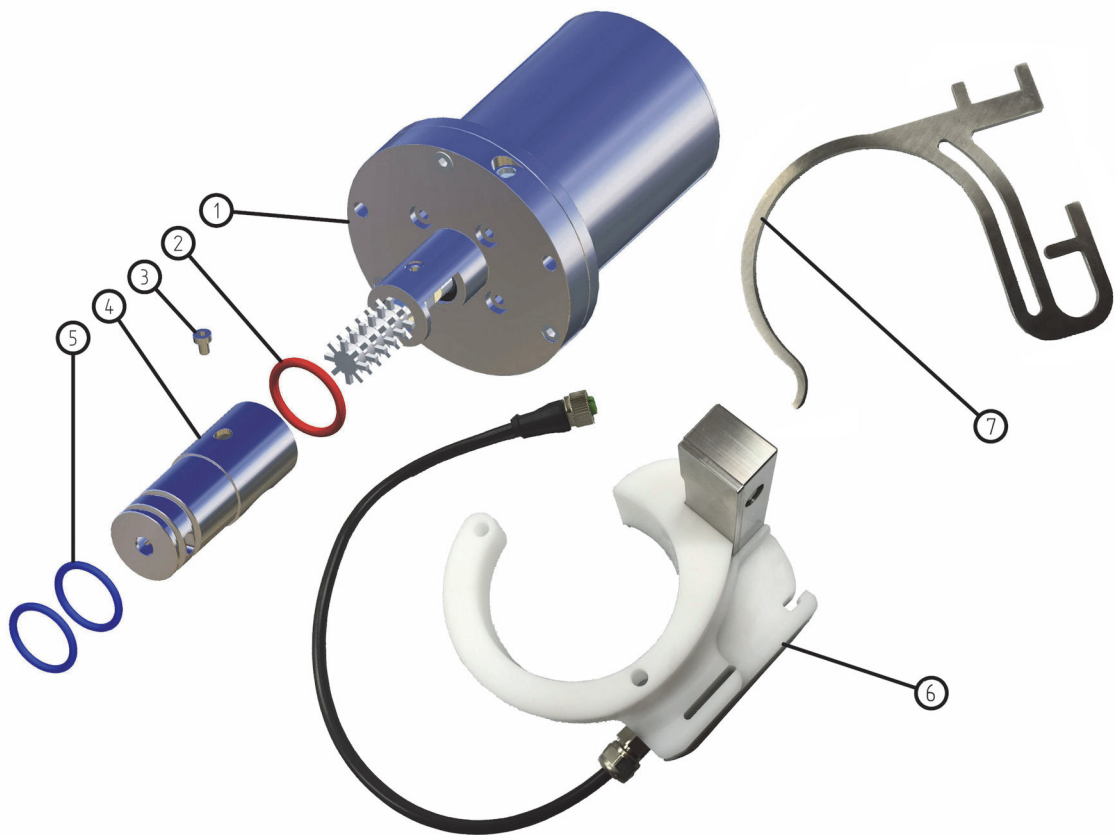
Item no.	Name	Quantity	Product no.	Item no.	Name	Quantity	Product no.
1	Cream seal	2	35000	22	Syrup valve	4	31592
2	Scraper blade	4	30091	23	Syrup hose	4x 1,20 m.	31605
3	Centre bar	2	30117				
4	Piston milkshake APM	1	30021	24	O ring 7 x 3	1	35009
5	Locking pin syrup bloc	1	0800048	25	Water valve	1	31590
6	Piston ice cream	2	30008	26	Coupling piece M6-6mm	1	31591
7	Piston centre	1	30003	27	Water hose (blue)	1,2 m	36212
8	O ring 23,82 x 3,53 (orange)	1	35034	28	O ring 10 x 3	1	35008
9	H ring	1	35122	29	Head bolt stainless steel (long)	2	137666
10	O ring 23,55 x 3,2	5	35006	30	Dispensing handle locking pin 230	1	31024
11	Allen bolt stainless steel M6 x 40	5		31	O ring 26,58 x 3,53 (orange)	1	35001
12	Nut stanless steel M6	3		32	Milkshake motor	1	31010
13	Combi head	1	30011	33	O ring 24 x 3,5 (blue)	2	35025
14	Dispensing handle	3	31027	34	Bush for Allen bolt	2	30032
	Dispensing handle spring	3	11223	35	O ring 12 x 2	1	35012
15	Head bolt stainless steel	4	138044	36	Valve hose 14 mm	1	33475
16	Locking pin syrup hoses	2	0830019	37	Non-return valve	1	30068
17	Syrup block	1	31640	38	O ring 16 x 2	1	35014
18	O ring 2 x 2	1	35026	39	Gasket 95 mm	2	138042
19	Water control valve	1	31648	40	Cylinder beater 95 mm	2	30053
20	Valve hose 6 mm	4	33471		O ring set NA 6468 Combi		33209
21	O ring 7 x 3	4	35009				

A2.2 Mix pump (2x)



Item no.	Name	Quantity	Product no.
1	Valve hose 14mm	1	33475
2	O ring 17 x 3	2	35013
3	Pump foot	1	085046
4	O ring 5,5 x 1,5	2	35029
5	Mix valve	1	33409
6	O ring 64 x 4	2	35017
7	X ring 62,87 x 5,33	1	35016
8	Nozzle tube short	1	33492
9	Bottom disc with shaft	1	085039
10	Nozzle	1	400...(+ size)
11	O ring 14 x 3	2	35021
12	Middle disc	1	085042
13	O ring 57 x 4	2	35015
14	O ring 8 x 2	1	97010
15	Top disc	1	085040
16	Pump housing	1	085043
17	Locking pin	2	085044
18	O ring 7,65 x 1,78	2	33400
	O ring set mix pump	1	33111

A2.3 Milkshake motor and APM sensor



Item no.	Name	Quantity	Product no.
1	Motor	1	31010
2	O ring 26.58 x 3.53	1	35001
3	Allen bolt (flat head) M4 x 6	1	028246
4	Brush housing	1	31002
5	O ring 24 x 3.5 (blue)	2	35025
6	APM sensor	1	34007
7	Cup holder	1	310 34

Annex 3 EC Declaration

EC Declaration of Conformity of the Machinery Directive 2006/42/EC, Appendix II, under 1.A

(translation of the original declaration)

Manufacturer,

Win Equipment B.V.
De Kronkels 31
3752 LM Bunschoten
The Netherlands



hereby declares that the following machine:

Name: Nissei soft ice cream machine
Type: NA 6468 Combi APM

is in conformance with the following EC directives:

- the Machinery Directive 2006/42/EC

and the following harmonised European standards:

- NEN-EN-ISO 12100-1/2
- NEN-EN-IEC 60204-1

Bunschoten, March 31st, 2017

Name: M. Jocker
Position: Manager Operations